

DIY or have it installed

Clear Waterproofing Membrane

for internal and external use on top of existing surfaces

BEFORE

Leaky Balcony

AFTER




By using **Clear Waterproofing Membrane** the following materials can now be used externally and in wet areas:

Timber



Concrete

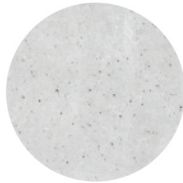

Wallpaper



FC Sheeting



Brick



Stone



Render



Innexboard



Paint/paintings



Metal



Installation Videos & Guides available online

Remedial Membranes Pty Ltd

ACN: 59611253117

Telephone: 02 8012 7216

Technical: Jasmin 0405 930 059

info@remedialmembranes.com.au

www.remedialmembranes.com.au



Shower Tray Kit

Coverage: 2 x coats of a standard shower base 900x900mm

As a Clear Waterproofing Membrane when applied to the shower floor and around the lower walls, it creates a seamless transparent shower tray, preventing water ingress which protects your shower now and from leaks in the future that are caused by movement.



Small Balcony Kit

Coverage: 2 x coats of up to 12m²



Large Balcony Kit

Coverage: 2 x coats of up to 30m²

Wet areas are at risk with varying temperatures as this encourages expansion and contraction in external building materials and over time this leads to shrinkage, cracking and lifting depending on how the area has been prepared and laid which invariably leads to water damage.

Clear Waterproofing Membrane (CWM) is engineered to keep its flexibility over time and is warranted* not to break down hence it is able to protect your building over time from future movement. Water has the amazing ability to track from its source to where we find evidence of it, usually in the form of a wet or mould patch on the ceiling; this makes it increasingly difficult to diagnose the source of the leak but with CWM being applied over the entire area means you can be confident that seepage has been stopped. This is done with a clear waterproofing membrane it is done without detracting or changing the original scheme or décor, even though you might not be able to locate the source of the initial leak. *refer to product warranty.

Accredited Installers

Love the product but don't want to install it yourself? Contact our Installers listed on our website, all Accredited Installers are experienced tradespersons that have been trained on the use of the Clear Waterproofing Membrane. When installed by an Accredited Installer your project is covered under the longest warranty for movement in the industry...find out more!

BEFORE



Leaky Shower

AFTER



Do you have a leaky shower or balcony that looks good but is leaking? Don't want to spend ten's of thousands of dollars ripping up and removing but don't know what to do?

Remedial Membranes – Clear Waterproofing Membrane (CWM) is a two part clear, hybrid water based, aliphatic polyurethane waterproofing membrane / coating in a clear gloss finish. As a clear waterproofing product it is able to be installed over leaking tiled surfaces like a shower or balconies to form a waterproof barrier without changing the original appearance. Remedial Membranes – Clear Waterproofing Solution is formulated for exposure to sunlight and is designed for applications where the original appearance of the substrate is desired such as tiled areas.